

PLAN NOTES


- 1 RELOCATE EXISTING THERMOSTAT.
- 2 RELOCATED THERMOSTAT. EXTEND CONTROL WIRES TO ASSOCIATED FURNACE AND CONDENSING UNIT.
- 3 INSTALL DUCTWORK BETWEEN TRUSSES IN ATTIC SPACE. SLOPE DUCTWORK WITH TRUSS PROFILE.
- 4 EXISTING FURNACE F-14. BALANCE FOR 1540 CFM. BALANCE OUTSIDE AIR FOR 90 CFM.
- 5 EXISTING FURNACE F-10. BALANCE FOR 900 CFM. BALANCE OUTSIDE AIR FOR 200 CFM.
- 6 EXISTING FURNACE F-19. BALANCE FOR 1200 CFM. BALANCE OUTSIDE AIR FOR 240 CFM.
- 7 CONNECT 3" EXHAUST DUCT TO PROCESSOR. EXTEND 4" DUCT AND CONNECT TO EXHAUST FAN EF-2. SEE PROCESSOR DUCT DETAIL.
- 8 INDOOR AIR CONDITIONER. INSTALL OUTDOOR UNIT ON CONCRETE PAD AT THE LOCATION OF EXISTING CONDENSING UNITS WITH REQUIRED CLEARANCES.
- 9 EXTEND REFRIGERANT PIPING TO OUTDOOR UNIT. EXTEND CONDENSATE DRAIN PIPING TO FLOOR DRAIN IN MECHANICAL ROOM.

JASONWAY IMAGING CENTER

FEB. 6, 1998 PROJ. No. : 97045

<input type="checkbox"/> SCHEMATIC DESIGN	—	△ REVISION No. 1
<input type="checkbox"/> DESIGN DEVELOPMENT	—	△ REVISION No. 2
<input type="checkbox"/> DESIGN DEV. SIGN-OFF	—	△ REVISION No. 3
<input type="checkbox"/> BIDDING	—	△ REVISION No. 4
<input type="checkbox"/> BLDG. PERMIT SUBMISSION	—	△ REVISION No. 5
<input type="checkbox"/> CONSTRUCTION	—	△ REVISION No. 6
<input type="checkbox"/> NOT FOR CONSTRUCTION	—	
<input type="checkbox"/> RECORD / FILE	—	

FLOOR PLAN HVAC

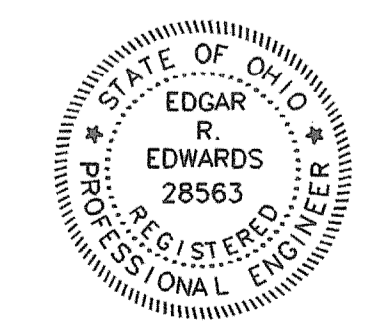

HVAC FLOOR PLAN
1/4"=1'-0" NORTH

M W.E. MONKS & CO.
ENGINEERS
3073 NORTH HIGH STREET COLUMBUS, OHIO 43202-1180
614-267-4928

H-01